

BOMBARDIER  
GLOBAL 5000

# REFUELING GUIDE

This guide is intended only to assist ground personnel. Always follow the applicable instructions in the Aircraft Maintenance Manual (AMM) and obey all safety precautions when performing refueling procedures. In the event of a conflict between the instructions in this guide and the AMM, the AMM shall take precedence over this guide.

BOMBARDIER

© 2007 BOMBARDIER INC.

FOLD


FOLD

FOLD



FOLD

GL5000\_FUEL\_Dec07


FOLD

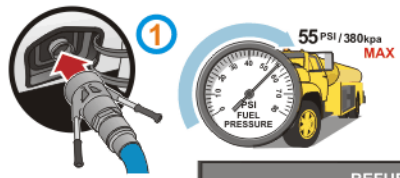



# MANUAL

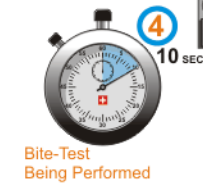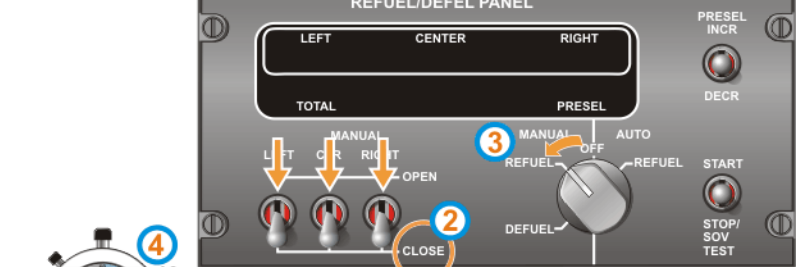



Bite-Test Being Performed

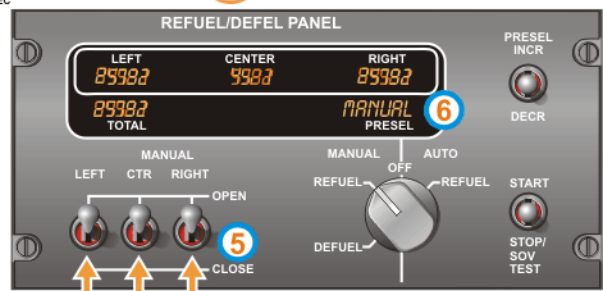



AS REQUIRED

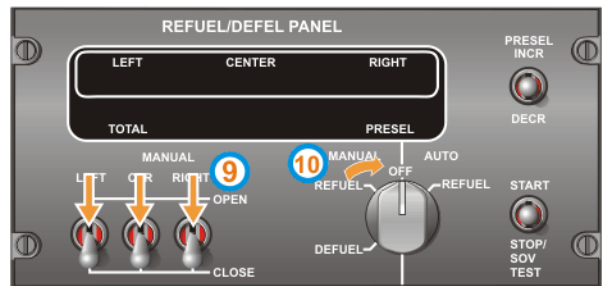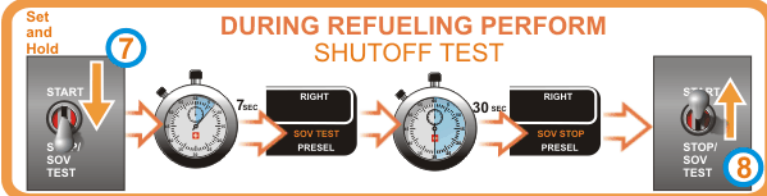





# AUTO

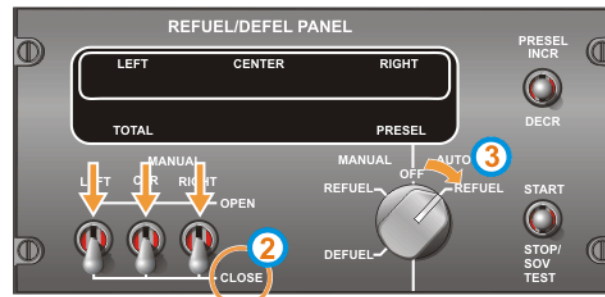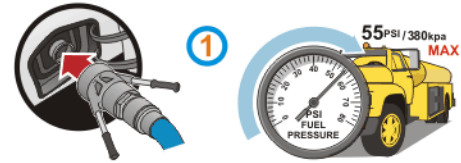

Bite-Test Being Performed

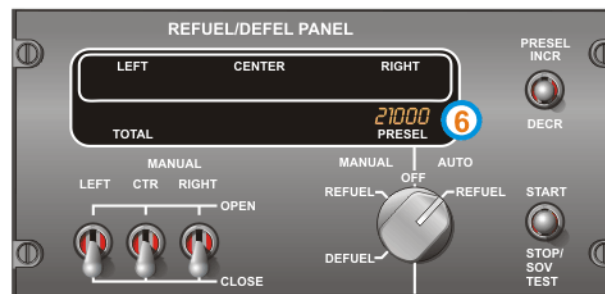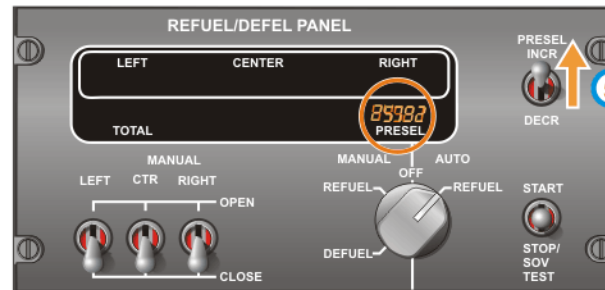

FOLD

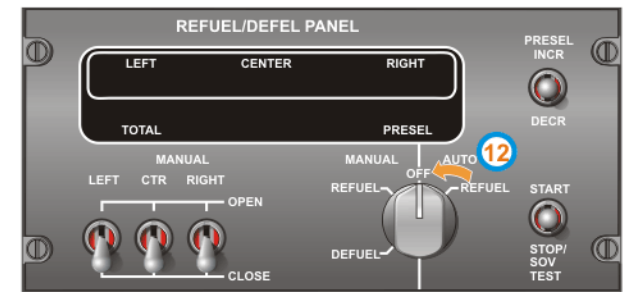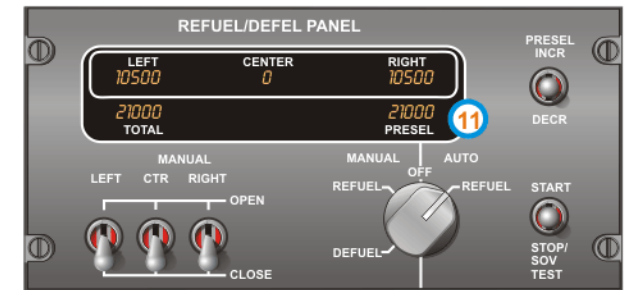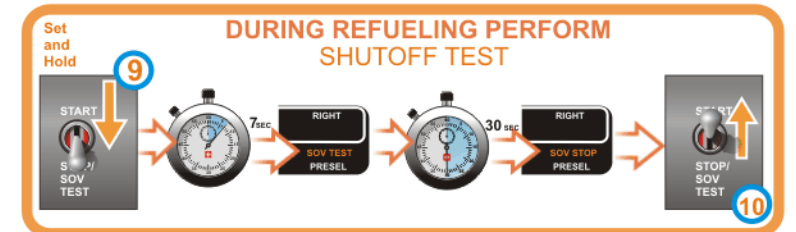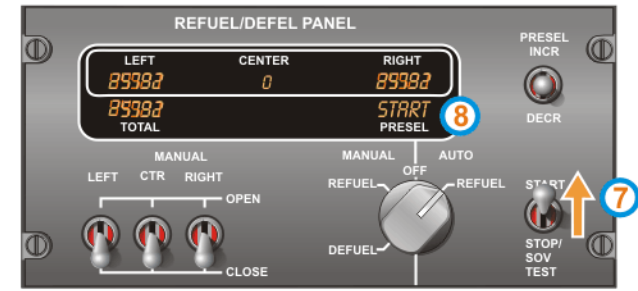

FOLD

FOLD